


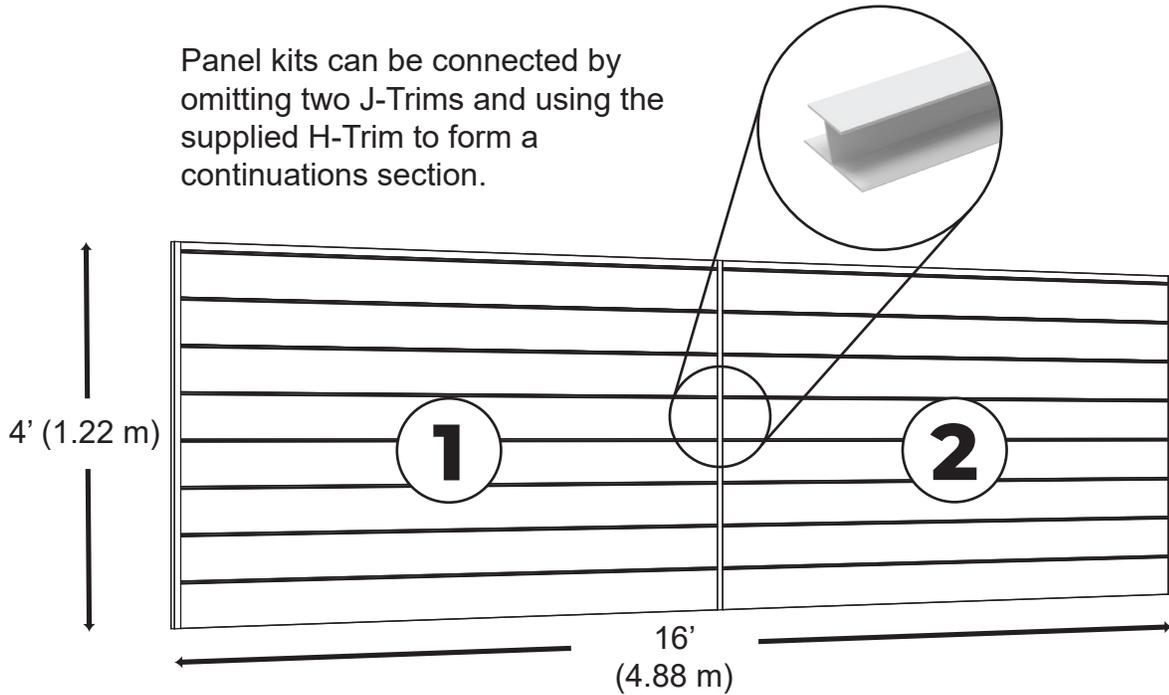

CrownWall™

Super Bundle Guide - Configuration 1

Panel kits can be connected by omitting two J-Trims and using the supplied H-Trim to form a continuations section.



CrownWall™

Super Bundle Guide - Configuration 2

Panel kits can be stacked on top of each other (with the top trim of the bottom kit not installed) to form a continues 8' (2.44 m) x 8' (2.44 m) section.

